

ZMF-II CHESS CLOCKS

ZMARTFUN ELECTRONICS, INC.



CONTENTS

1. PRODUCT DESCRIPTION	3
2. MENU OPTIONS	4
2.1 Quick Time Change	4
2.2 Set Time in Hours and Minutes	5
2.3 Set Time in Minutes and Seconds	5
2.4 Set Delay	6
2.5 Set Increment	6
2.6 Set Tournament Modes	6
2.7 Set Hourglass Mode	7
2.8 Set Byo-yomi Mode	8
2.9 Set Dual Counter Mode	8
2.10 Set Score Keeper Mode	9
2.11 Set LED Indicators to On/Off	9
2.12 Set Sound to On/Off	10
2.13 Exit Menu	10
3. PENALTY TIME CHANGES	10
4. REPLACING BATTERIES	10
5. RETURNS	11
6. TECHNICAL SPECIFICATIONS	11
7. TROUBLESHOOTING	12


1. PRODUCT DESCRIPTION

These are the coolest chess clocks in the market. They are very easy to program and easy to use. Our clocks use modern LED technology with eye-catching colors. These clocks were designed and engineered by avid chess players, but the clocks can be used for nearly every competitive two-player board game. Some of the main features of these clocks are

- MADE IN THE USA!
- Stainless steel touch sensing buttons.
- Very easy to program menus.
- Delay, Increment, Hour-glass, and Byo-yomi timing modes.
- Programmable tournament modes with moves counter. Three time controls available.
- Dual timer mode (both timers can go up or down simultaneously or one at a time).
- Score keeper mode (clock can be used to keep the score in a match)
- Three different preset settings/modes can be kept in memory at all times.
- Highly accurate clock.
- Sound and LED indicators can be turned off.
- Clock can be used for nearly every competitive two-player board game like Scrabble, Shogi, and Go.
- Low power consumption. Batteries should provide power for more than 1600 hours of use under normal conditions (compare to 600 hours of use that other clocks offer).
- Very strong plastic enclosure to protect your clock
- Transparent windows for the displays are made of high impact-resistance polycarbonate (this is the same material used in the thick barriers of transparent plastic used in teller's windows in banks).
- Affordable price.
- 4 C batteries not included.
- Patent pending.

The main features of these clocks are

- 1) Touch sensing player buttons.
- 2) On/Off slide switch.
- 3) Button use to stop/reset game, enter menu options, and accept settings.
- 4) LED player indicators.
- 5) Main displays.

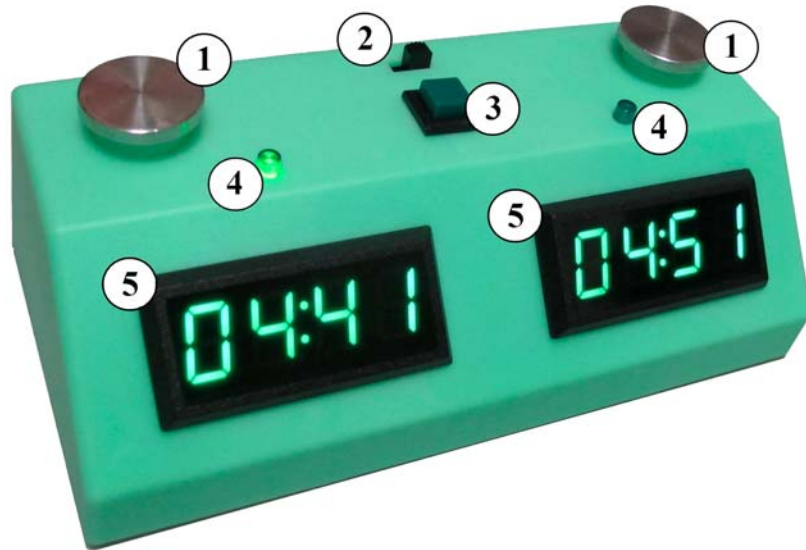

2. MENU OPTIONS

To enter the menu options

1. Press the menu button to stop the game (assuming a game is in progress).
2. Press the menu button again to reset the timer to its preset setting/mode.
3. Press and hold for 5 seconds the menu button.
4. Use any of the player's touch buttons to navigate through the menu options.

2.1 Quick Time Change

05:00 05:00

1. Press the menu button to stop the game.
2. Press the menu button again to reset the timer to its preset setting/mode.

3. Press and hold for 5 seconds the menu button to enter the menu options. If a regular time setting was preset (ex: **MM:SS MM:SS**, or **HH:MM HH:MM**) then a flashing time display will be seen (ex: flashing **05:00 05:00**).
4. Press the menu button one more time to enter "Quick Time Change" mode or press any of the player buttons to enter the menu options. If in "Quick Time Change" mode, make changes using the player buttons and the menu button until time is set.


Note: A quick touch of any of the players' buttons is required to increment or decrement the time by one unit. If the finger/hand is left touching the button the time will keep changing. This feature was intentionally included in the clock design to facilitate setting up the time in the unit.

2.2 Set Time in Hours and Minutes



1. Press the menu button to enter this mode when a flashing "**HH:MM HH:MM**" is displayed. Time can be set in hours and minutes (HH:MM).
2. Use any of the player buttons to change the time and accept the settings using the menu button.

2.3 Set Time in Minutes and Seconds



1. Press the menu button to enter this mode when a flashing "**MM:SS MM:SS**" is displayed. Time can be set in minutes and seconds (MM:SS).
2. Use any of the player buttons to change the time and accept the settings using the menu button.

2.4 Set Delay

A digital display showing the text "DEL 00" in a monospaced font. The "DEL" is on the left and "00" is on the right, with a small gap between them.


1. Press the menu button to enter this mode when a flashing "**DEL 00**" is displayed. A flashing "00" will be displayed.
2. Use any of the player buttons to set the number of seconds for the delay. A maximum of 60 seconds can be programmed for this function.
3. Press the menu button to accept the settings.
4. Go to "**PLAY - - - -**" and press the menu button to start a new game.

2.5 Set Increment

A digital display showing the text "INC 00" in a monospaced font. The "INC" is on the left and "00" is on the right, with a small gap between them.

1. Press the menu button to enter this mode when a flashing "**INC - 00**" is displayed. A flashing "00" will be displayed.
2. Use any of the player buttons to set the number of seconds for the increment. A maximum of 60 seconds can be programmed for this function.
3. Press the menu button to accept the settings.
4. Go to "**PLAY - - - -**" and press the menu button to start a new game.

2.6 Set Tournament Modes

A digital display showing the text "P-00 000" in a monospaced font. The "P-00" is on the left and "000" is on the right, with a small gap between them.

1. Press the menu button to enter this mode when a flashing "**P-00 000**" is displayed.
2. Enter the number of moves that you want for the first time control and then press the menu button.

3. Enter the number of minutes that you want for the first time control, and then press the menu button. The next display will be shown "**-ALL 000**".
4. If only two time controls are required press the menu button (ex: **-ALL 000** with a flashing **000**). If three time controls are required then use any of the player's buttons to set the number of moves for the second time control and press the menu button (ex: **P-20 000** with a flashing **000**).
5. Enter the number of minutes that you want for the second time control and then press the menu button.
6. If three time controls were selected from step 4 then enter the number of minutes for the third time control and press the menu button.
7. Go to "**PLAY - - -**" and press the menu button to start a new game.

Example 1: The following settings "**P-40 60**" and "**-ALL 30**" correspond to 40 moves in 60 minutes and 30 minutes will be added to the clocks after the first time control to finish the game.

Example 2: The following settings "**P-40 60**", "**P-20 30**", and "**P- 30**" correspond to 40 moves in 60 minutes for the first time control, then 20 moves in 30 minutes for the second time control, and 30 minutes to finish the game for the third time control.

Note: The number of moves that have been made by each player is displayed for approximately 0.5 seconds after each player makes his move. The unit starts counting moves right after the player with white pieces makes his first move. Black should start the clock.

2.7 Set Hourglass Mode



The image shows a digital display with a rectangular border. Inside the border, the text 'H0GL' is on the left and '000' is on the right, both in a monospaced, digital font. The '0' in 'H0GL' is a zero, and the '000' is three zeros.

When playing in this mode, the time that each player uses to think about his next move is subtracted from his clock and added to his opponent's clock. A player loses when his time reaches zero. For example, if both players start with 30 seconds and the first player to act spends 5 seconds to make his first move then his time will be 25 seconds and his opponent's time will be 35 seconds.

1. Press the menu button when a flashing "**HOGL 000**" is displayed.
2. Set the desired time by pressing any of the player's buttons. A maximum of 3 minutes and a minimum of 5 seconds can be set in this mode.
3. Press the menu button to accept your settings.

2.8 Set Byo-yomi Mode



1. Press the menu button when a flashing "**BYO YOMI**" is displayed. The next display will be shown "**BYO- 00**" with a flashing **00**.
2. Set the number of minutes for the game before any Byo-yomi periods.
3. Press the menu button. The next display will be shown if Byo-yomi hasn't been set yet "**b-01 05**" with a flashing **01**, where **01** represents the number of Byo-yomi periods and **05** represents the number of seconds per period.
4. Set the number of Byo-yomi periods and press the menu button.
5. Set the number of seconds per Byo-yomi period and press the menu button.

2.9 Set Dual Counter Mode



In dual counter mode both timers can go up (increment) or down (decrement) simultaneously or one at a time.

1. Press the menu button when a flashing "**DUAL COUN**" is displayed. The next display will be shown "**INCR** " with a flashing **INCR**.
2. If a dual timer in incrementing mode is desired then press the menu button. The next display will be shown "**00:00 00:00**". Start and/or stop the timers by pressing the touch sensor buttons.

3. If a dual timer in decrementing mode is desired then press any of the touch sensor buttons. The next display will be shown "**DECR HH:MM**" with a flashing **DECR**. Press the menu button. Set the number of hours desired and press the menu button. Set the number of minutes desired and press the menu button. Start and/or stop the timers by pressing the touch sensor buttons.

2.10 Set Score Keeper Mode

A rectangular LCD display showing the text "SCOR OFF" in a digital font. The text is split across two lines: "SCOR" on the top line and "OFF" on the bottom line.

In this mode the clock can be used to keep the score in a match. The score will be displayed at all times, so the unit timers will be disabled.

1. Press the menu button when a flashing "**SCOR OFF**" is displayed. The next display will be shown "**SCOR ON**".
2. Use any of the touch sensor buttons to go to "**PLAY - - - -**" and press the menu button.
3. Use the touch sensor buttons to keep the score in a match.

2.11 Set LED Indicators to On/Off

A rectangular LCD display showing the text "LED ON" in a digital font. The text is split across two lines: "LED" on the top line and "ON" on the bottom line.

This setting turns on or off the LED light indicators. These LEDs are used to indicate whose turn it is to move.

1. Press the menu button when a flashing "**LED ON**" or "**LED OFF**" is displayed. This will toggle the LED indicators between the on/off options.

2.12 Set Sound to On/Off

A rectangular LCD display with a white border showing the text "SOUN ON" in a black, segmented font.

This setting turns on or off the sound in your unit.

1. Press the menu button when a flashing "SOUN ON" or "SOUN OFF" is displayed. This will toggle the sound between the on/off options.

2.13 Exit Menu

A rectangular LCD display with a white border showing the text "PLAY ----" in a black, segmented font.

Press the menu button when a flashing "PLAY ----" is displayed to accept all your setting and start a new game. All settings are automatically stored in memory.

3. PENALTY TIME CHANGES

Use this procedure in the event that the arbiter needs to increase or reduce a player's remaining time. Also, the number of moves can be adjusted if the clock is in tournament mode.

1. Press the menu button once to stop the timers (assuming the game is in progress).
2. Press and hold the menu button for five seconds.
3. Use the touch sensors and the menu button to make any necessary changes. If in tournament mode the number of moves can be changed also.

4. REPLACING BATTERIES

Batteries should be replaced when the displays are starting to look dim. Use 4 C batteries. Refer to the technical specifications below for more details.

1. Turn off the unit.
2. Place your clock on a table with the display facing down. Care should be taken as not to scratch the display.
3. Remove the battery compartment cover.
4. Replace the 4 C batteries. There are some marks in the batteries holder that indicate the proper battery polarity direction.
5. Replace the battery compartment cover.

5. RETURNS

Our clock units come with a **one year warranty** against manufacturing defects. Read the troubleshooting section in your manual. A proof of purchase with the purchase date on it will be required for any returns.

6. TECHNICAL SPECIFICATIONS

- When not in use, power should be turned off to maximize batteries lifetime.
- Requires 4 C batteries. Use alkaline batteries only (recommended). Do not mix old or rechargeable batteries with new ones. Do not use batteries with a voltage higher than 1.5V like the Oxyride batteries; doing so might permanently damage the circuitry in your unit.
- Batteries should provide power for more than 1600 hours of use under normal conditions (compare to 600 hours of use that other clocks offer).
- < 20 mA consumption.
- Maximum Input Voltage: 6.5V
- High display brightness.
- 1/2" display digit size.
- Operating temperature: -30 °C to 80 °C.
- Chess clocks are intended for indoor use only. These LED displays and some types of color LCD displays are hard to read when exposed to bright sunlight. However, no harm is done to the unit by using it outdoors.

7. TROUBLESHOOTING

<p><u>Problem:</u> The display in my clock is not bright anymore and the clock sometimes behaves erratically changing turns by itself.</p>	<p><u>Solution:</u> This is an indication that the batteries need to be replaced. The touch sensing circuitry needed for the touch buttons is very sensitive to small changes in the supply voltage. When the batteries are drained or near drained, the clock might behave erratically from time to time changing turns by itself, and also the display will not be as bright as before. Replacing the batteries will return your unit to normal operation.</p>
<p><u>Problem:</u> I replaced the batteries but the clock is not working. The clock was working before the batteries replacement.</p>	<p><u>Solution:</u> Make sure that the batteries are installed in the proper polarity direction. There are some marks in the batteries holder that indicate the proper battery direction. Check the on/off slide switch.</p>
<p><u>Problem:</u> When playing a game the timing in the clock would not behave as expected.</p>	<p><u>Solution:</u> Make sure that the menu options for delay "DEL 00", increment "INC 00", hourglass "HOGL 000", dual-counter "DUAL COUN", score keeper "SCOR ON", byoyomi "BYO YOMI", and tournament modes "P-00 000" are all set to zero or off.</p>
<p><u>Problem:</u> There is no beeping sound coming out of the clock.</p>	<p><u>Solution:</u> Set the menu option for the sound from off "SOUN OFF" to on "SOUN ON". Refer to the "Set Sound to On/Off" procedure in your clock manual.</p>
<p><u>Problem:</u> The LED light indicators do not work.</p>	<p><u>Solution:</u> Set the menu option for the led indicators from off "LED OFF" to on "LED ON". Refer to the "Set LED Indicators to On/Off" procedure in your clock manual.</p>